 


MANUAL SUPPLEMENT

GRINDER EQUIPPED WITH A BRIGGS & STRATTION ENGINE, HAVE A ENGINE STOP SWITCH AS SHOWN IN PICTURE BELOW.



TO STOP ENGINE, PRESS STOP TAB AGAINST SPARK PLUG.

ANVIL ADJUSTMENT

AFTER BLADE HAS BEEN SHARPENED, IT MIGHT BE NECESSARY TO ADJUST ANVIL. CLEARANCE SHOULD BE $1/16$ OF AN INCH, AS SHOWN BELOW.

